

WBX 2000 series Washpoint Assembly Instructions

**Covers Balmoral, Barossa, Grande,
Pompadour & Vivaldi 2000 models**

**Unit is simple to assemble with basic hand
tools.**



STEP 1

FIT THE 4 SILVER BOLTS TO THE FRONT
OF THE 2000 SERIES FRAME.

4 X BOLTS



STEP 2

PLACE THE FRONT HALF COVER OVER THE FRAME ENSURING THAT THE 4 PRE-FITTED BOLTS COME THROUGH THE 4 HOLES IN THE COVER.



STEP 3

INSTALL THE SHOWER HEAD & HARDWARE TO THE BASIN THEN FIT THE TILTING MECHANISM WITH OUTER RUBBER COVER TO THE BOTTOM OF THE BASIN.

FIT THE SILVER PLASTIC TOP RING AROUND THE RUBBER BEFORE LOWERING IN POSITION. SECURE THE BASIN ASSEMBLY BY LOCATING THE 2 BOLTS IN THE 2 HOLES IN THE FRAME AND FIT THE 2 NUTS AND TIGHTEN TO SECURE.

THE 2 OTHER BOLTS WITH THE SPRINGS ARE TO ALTER THE TENSION OF THE TILTING MECHANISM ON THE BASIN.



STEP 4

WRAP THE SPRING AROUND THE SILVER SHOWER HOSE THEN FEED THE WHITE CABLE TIE THROUGH THE SPRING LOOP ENDS AND SECURE IN THE PRE- DRILLED HOLE AT THE BOTTOM OF THE FRAME.

THIS WILL KEEP TENSION ON THE SHOWER HOSE AND HELP IT TO RETURN TO ITS HOLDER IN THE BASIN AFTER USE.




STEP 5

SECURE THE 2 SILVER COVERS WITH THE 5 BOLTS EACH SIDE AND ENSURE THAT THE SILVER PLASTIC RING AT THE TOP OF THE PEDESTAL IS SECURE AND LEVEL.

THE CONVOLUTED BLACK RUBBER COVER IS RIBBED SO BE SURE THAT THE SILVER RING IS IN THE SAME GROOVE ALL THE WAY AROUND.

10 X CHROME BOLTS

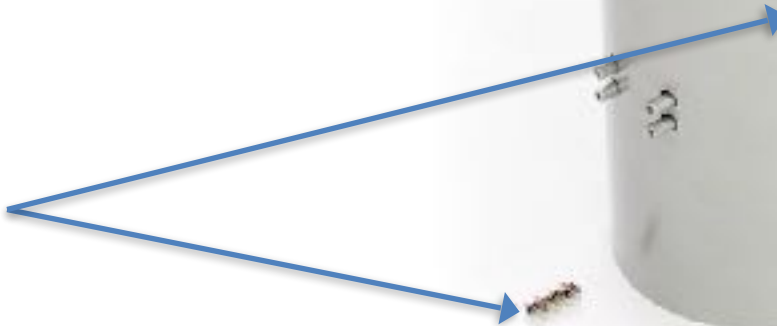

STEP 6



FIT THE SEAT FRAME TO THE 4 BOLTS &
TIGHTEN NUTS WITH ALLEN KEY PROVIDED.



STEP 7

SECURE THE SEAT FRAME AND PEDESTAL
TO THE FLOOR WITH THE 5 BOLTS AND
RAW PLUGS PROVIDED.

5 X RAWPLUGS & BOLTS



STEP 8

SECURE THE CHAIR TO THE FRAME
WITH THE 4 BOLTS PROVIDED WHICH
BOLTS THROUGH THE UNDERSIDE OF
THE FRAME INTO THE SEAT SLIDER.



SEAT SLIDER LEVER ALLOWING 75 MM OF FOR AND AFT ADJUSTMENT



STEP 9

LIFT THE SEAT
SLIDER LEVER
TO ADJUST THE
RANGE OF FOR
AND AFT
MOVEMENT
WHICH LOCKS
IN ANY
POSITION.



SEAT SLIDER LEVER



STEP 10



FULLY ADJUSTABLE SEAT SLIDER WITH 75MM OF FOR AND AFT ADJUSTMENT WITH LOCK
FULLY TILTING BASIN WITH ADJUSTABLE TENSION.

STEP 10



All Done !
Enjoy your washpoint

